

Fahrerrückenlehne / Driver back rest

HONDA CMX 500 Rebel
(2017-)

Artikel Nr.: / Item-no.:


4216998 00 01 schwarz/black



DE INHALT
GB CONTENTS

1	700008487	Rückenlehne	1	700008487	Back rest
1	700009718	Halter	1	700009718	Holder
1	700009720	Schraubensatz	1	700009720	Screw kit
2x Zylinderschraube ISK M6x25 1x Linsenkopfschraube M8x25 2x Linsenkopfschraube M8x12 1x U-Scheibe Ø8,4x3mm 3x U-Scheibe Ø8,4			2x allen screw M6x25 1x filister head screw M8x25 2x filister head screw M8x12 1x washer Ø8,4x3mm 3x washer Ø8,4		

DE BENÖTIGTE WERKZEUGE
GB TOOLS REQUIRED



DE WICHTIG
GB IMPORTANT

Beachten Sie die in Ihrem Land geltenden Zulassungsbestimmungen.
Für den Bereich der BRD gilt: Ein Eintrag in die Fahrzeugpapiere ist nicht erforderlich.

Die Voraussetzung für die Montage ist natürlich eine gewisse technische Erfahrung. Wenn Sie sich nicht sicher sind, wie man eine bestimmte Arbeit ausführt, sollten Sie diese Ihrer Fachwerkstatt überlassen. Ziehen sie alle zugänglichen Schrauben zuerst nur locker an. Nachdem alles montiert ist, werden die Schrauben dann auf das entsprechende Anzugsmoment festgezogen. Dadurch wird sichergestellt, dass das Produkt spannungsfrei angebaut ist. Anzugsmomente beachten! Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!

Of course, the assembly requires a certain technical experience. If you are not sure how to execute a determined action, you should ask your local distributor to do it. First, tighten all screws only loosely. After mounting all parts, the screws should be tightened to the torque specified. This guarantees, that the product is mounted without tension. Observe the tightening torques of the manufacturer! Control all screw connections after the assembling for tightness!

DE VORBEREITUNG
GB PREPARING

Den Soziussitz entfernen, dieser sowie die vordere Schraube und Distanz entfallen. Die hintere Originalschraube im Fender wieder eindrehen. Den Fahrersitz entfernen, hierfür die beiden Schrauben hinten unter dem Sitz entfernen, diese entfallen. Die beiden Schrauben des Trafos entfernen und diesen nach hinten wegklappen.
Beim Modell ohne Trafo, die beiden Schrauben der Sitzbankhalterung lösen.
Remove the back seat, seat and the front screw and spacer are obsolete. Mount the rear original screw again in the fender. Remove the driver's seat - for this, remove the two screws under the seat. Screws are obsolete.
Remove the two screws of the transformer and fold it backwards.
On the model without transformer, loosen the two screws of the seat bracket.

Fahrrückenlehne / Driver back rest

HONDA CMX 500 Rebel
(2017-)

Artikel Nr.: / Item-no.:

4216998 00 01 schwarz/black




DE MONTAGEANLEITUNG
GB MOUNTING INSTRUCTIONS

Montage des Halters:


Den Halter unter dem Rohrrahmen durchführen, Trafo bzw. Halterung, wieder montieren. Vorne den Halter samt Fahrersitz mit den Zylinderschrauben M6x25 befestigen.

Fastening of the holder:

Push the holder under the pipe frame, fix the transformer or holder. Mount the holder with the seat with allen screws M6x25.



1

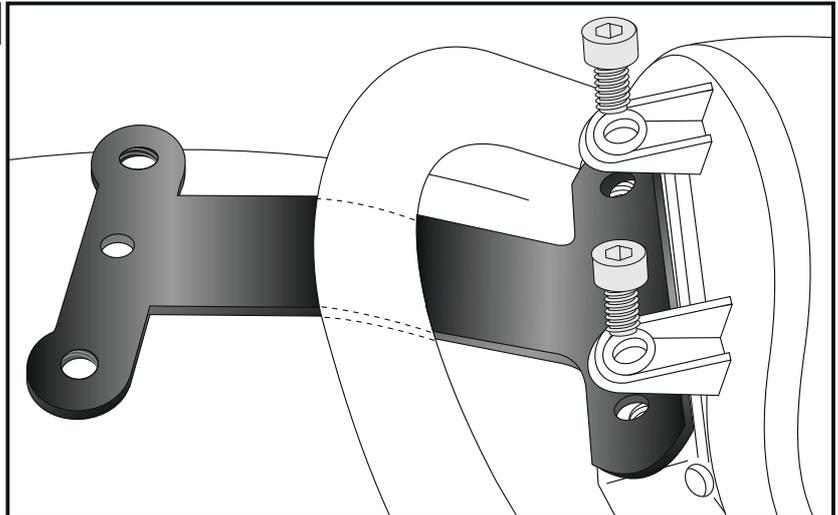

Montage der Rückenlehne:

Die Montage erfolgt an den freien Gewindebohrungen des Halters **①** mit den Linsenkopfschrauben M8x12 und U-Scheiben Ø8,4.



Eine zusätzliche Verschraubung **②** erfolgt in der Mitte mit der Linsenkopfschraube M8x25 und U-Scheibe Ø8,4. Zwischen Halter und Fender die U-Scheibe Ø8,4x3mm fügen.

Fastening of the Back rest:


At the free threads of the holder **①** with filister head screws M8x12 and washers Ø8,4.

Additional fixing point **②** in the middle with filister head screw M8x25 and washer Ø8,4. Add washer Ø8,4x3mm between holder and fender.


2

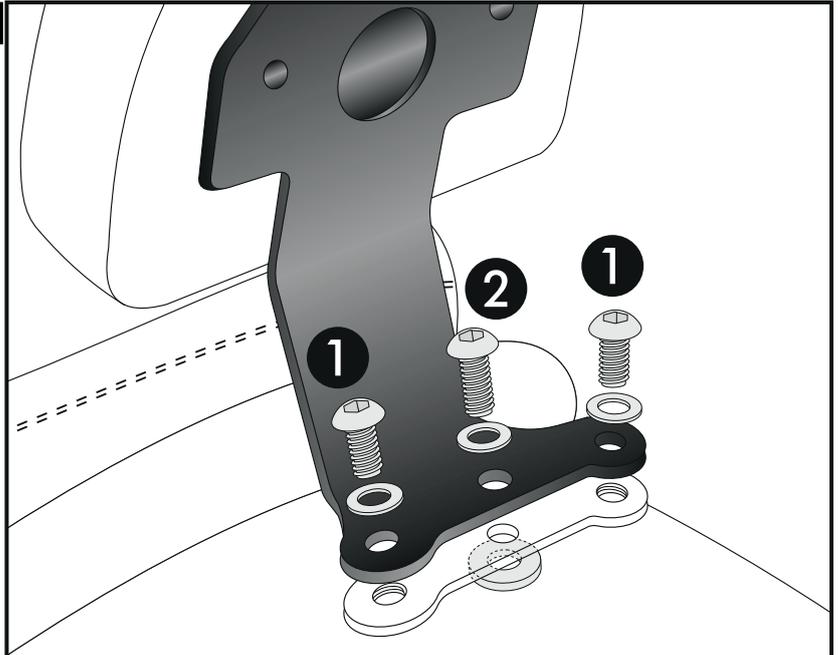

2x



1x



3x



1x

Weiteres Zubehör auf unserer Homepage. More accessories: see our homepage.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Germany

Tel.: +49 (0)6331 - 1453 - 100
Fax: +49 (0)6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de